



Anti-Seize Push-In Fitting
Available for 4mm and 5mm tube

Installing Pipe

1. Ensure pipe cut cleanly at 90°.

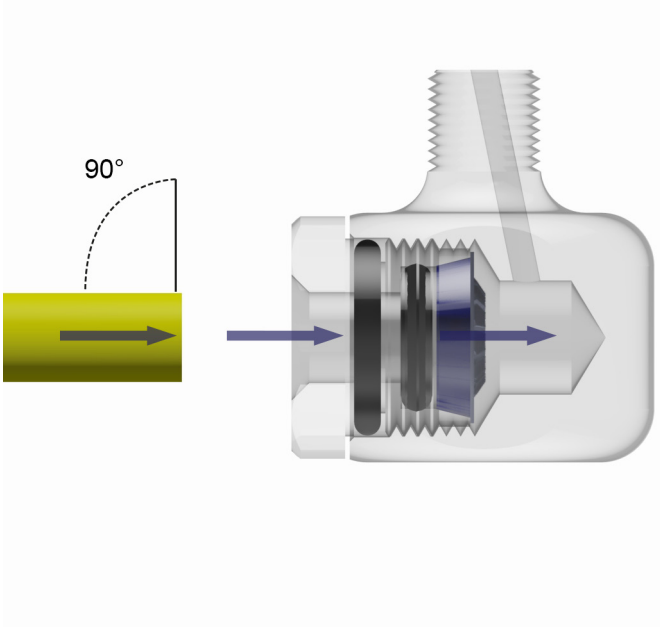




2. Ensure Pipe fully located into fitting.

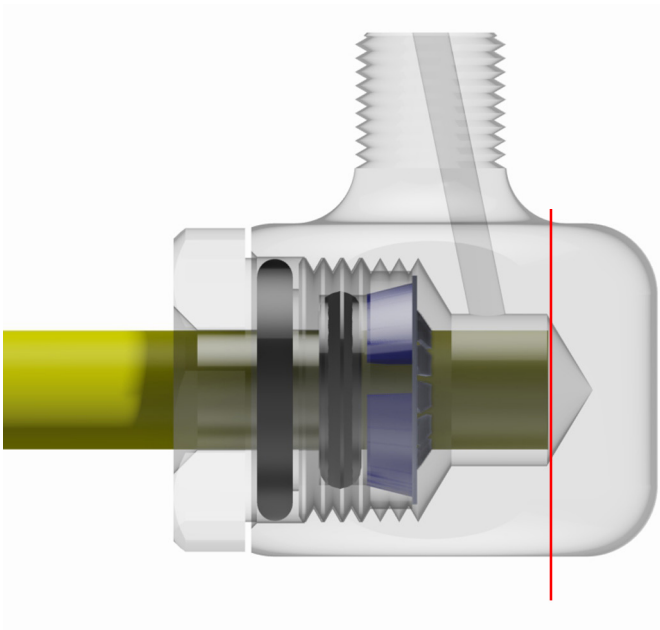

Servicing

To remove pipe from fitting in the field simply unscrew + replace sleeve nut.

DO NOT OVERTIGHTEN

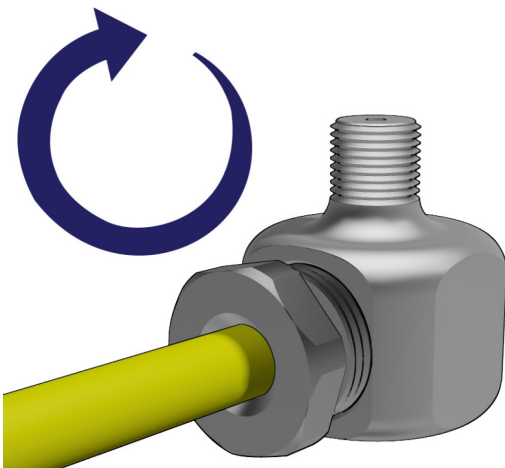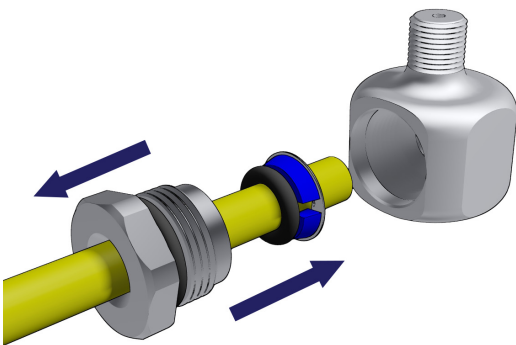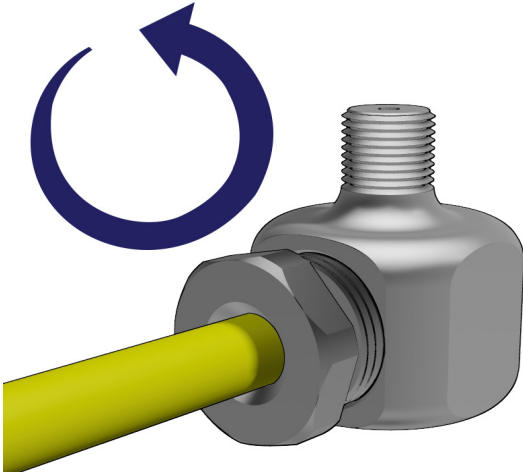




Pipe Replacement Procedure


In the rare event that a pipe is damaged and requires replacement.

1. Remove sleeve nut from fitting


2. Cut pipe 2 cm above sleeve nut.

 3. Remove o-ring from Sleeve nut, Introduce chamfered end of the sleeve nut the to star washer at other end of pipe.

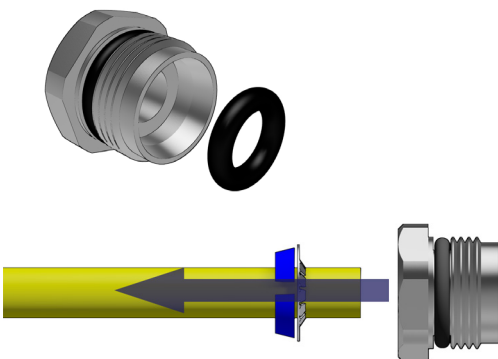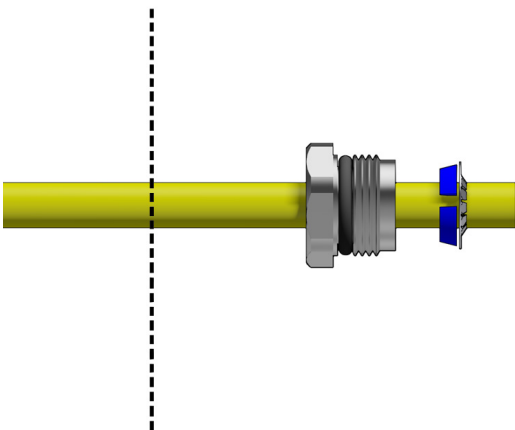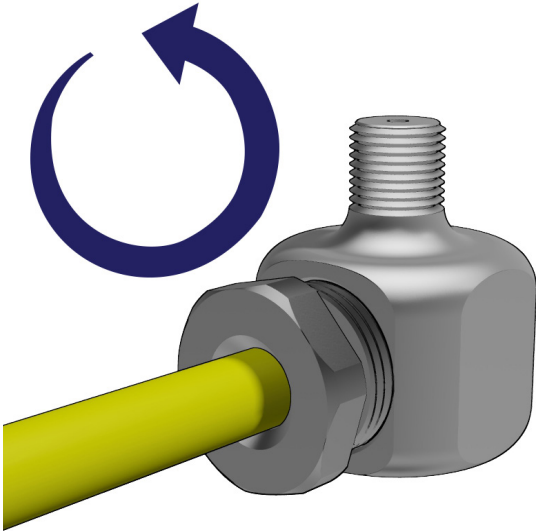




4. Use the sleeve nut to slide star washer and blue grip ring from pipe (retain o-ring, star washer and blue grip ring)

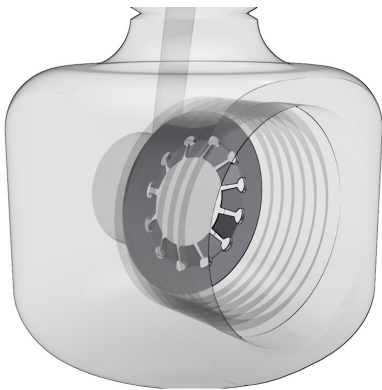

5. Replace star washer into fitting teeth side first.

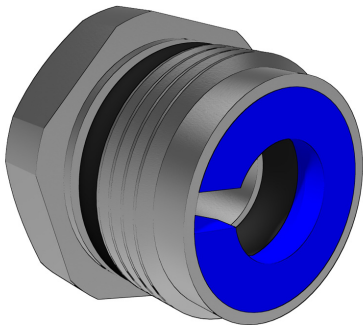

6. Replace o-ring into sleeve nut and then secure blue grip ring chamfer side first as shown.



7. Replace sleeve nut into fitting.

DO NOT OVERTIGHTEN

THE FITTING IS NOW READY TO ACCEPT NEW PIPE.